

*Q. Show me how you would check that the headlights & tail lights are working.*


*A. There is no need to get out of the car to answer this question – just say that you would turn on the lights switch (show the examiner where it is), and walk round the vehicle to check all the lights are on.*



Rear (Tail) Lights

Note: The brake lights are also in the same place. The light bulbs have two filaments, and the brake pedal switches on the brighter one.

The light switch is on the indicator stalk on the left side of the steering column. The lights are switched on by rotating the end of the lever upwards – one click for parking lights, two for headlights (see fog lamps show/tell question for picture of stalk).

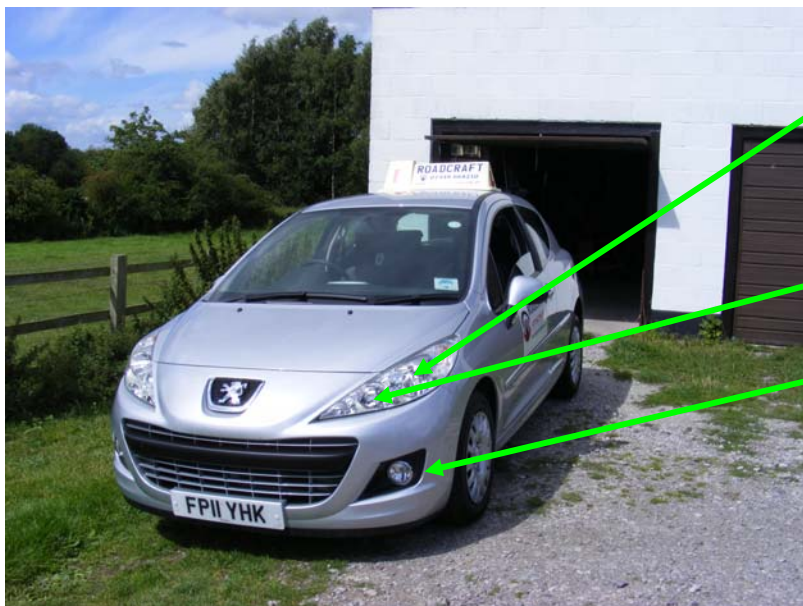

*Dipped Beam  
(Same brightness  
on dipped or main  
beam setting)*

*Main Beam*

*Front Fog Lamp*