

Q. Show me how you switch your headlight from dipped to main beam and explain how you would know the main beam is on whilst inside the car

A. Operate switch, check with main beam warning light

The light switch is on the left side of the steering column and is combined with the indicator switch. The lights are switched on by rotating the end of the stalk upwards – one click for parking lights, two for headlights.



The headlights are switched between main beam and dipped beam by pulling the light/indicator stalk towards you and then releasing it. A warning light appears to show which headlight beam is in operation – green warning light = dipped, blue warning light = main beam.

