


Q. Show me how you would set the demister controls to clear all the windows effectively, this should include both front and rear screens

A. Set all relevant controls including fan, temperature, air direction/ source and heated screen to clear windscreen and windows. Engine does not have to be started for this demonstration

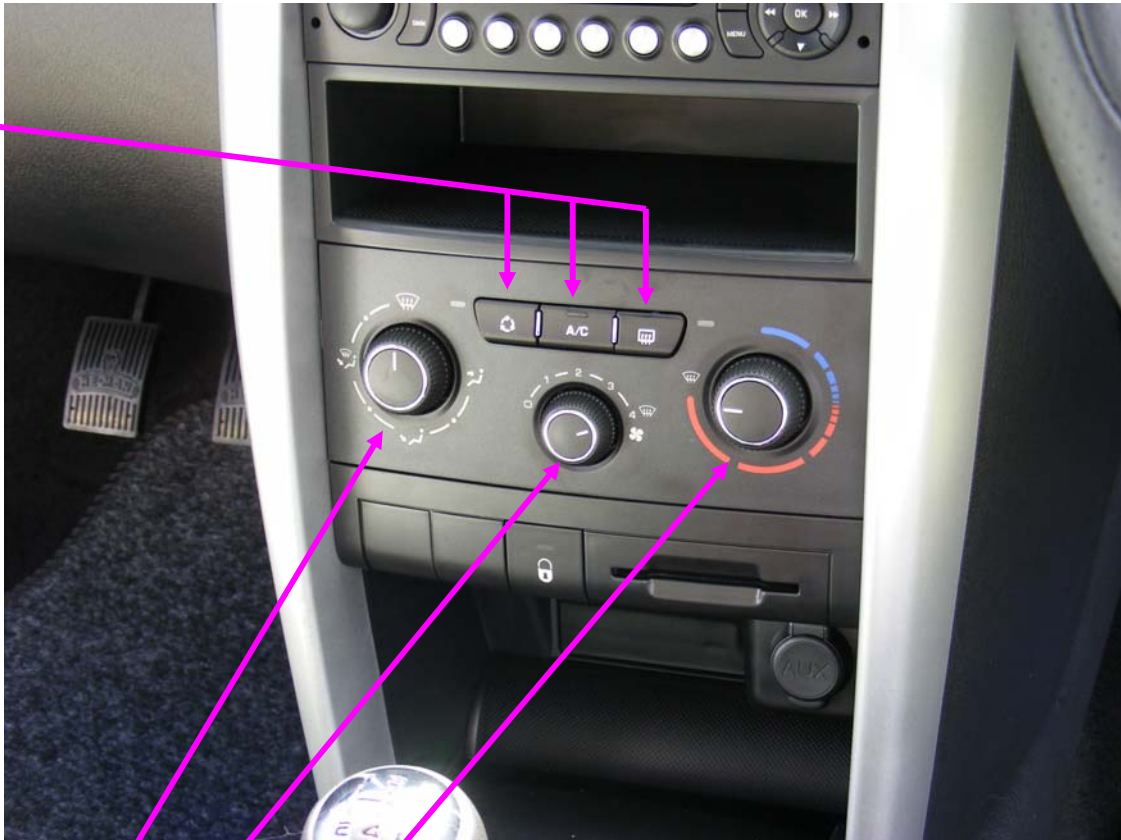

To demist windscreen and front side-windows:

1. Move the rotary air-direction switch on left side of central pod clockwise to its top setting (directing all air on to windscreen)
2. Rotate the central rotary switch clockwise to increase the fan speed to 2, 3, or 4,
3. Increase the temperature of the air flow by rotating the rotary control clockwise to 'hot'.
4. Make sure **fresh air** is entering the car (the recirculating air control is off when the warning light is not showing) - press the **air-conditioning (AC)** switch to 'on' (warning light is lit) - and press the **heated rear window** button to 'on' (so warning light is lit).